



Mode**Panel** Adjustable Gates Install Guide

Contents

ModePanel Adjustable Gate Components	3
Step 1 Measuring the Gate	4
Step 2 Disassembling the Gate	4
Step 3 Cutting the Gate to Size	5
Step 4 Completing Assembly	5
Step 5 Installing the Gate	6

Boundaryline ModePanel Adjustable Gates

This guide provides step-by-step instructions for adjusting the width of Boundaryline’s ModePanel Adjustable Gates, ensuring a quick and simple set up process.

For any questions, or if further assistance is required, please contact the Boundaryline Technical Team on 0800 003 006 or email technical@boundaryline.co.nz.


Required Tools/Materials	Safety Gear
☐ Tape measure ☐ Square ☐ Drill/Driver ☐ Hex drive bit 5/16 driver ☐ Circular Saw/Other Saw ☐ Rubber Mallet	☐ Safety boots ☐ Gloves ☐ Eye protection ☐ Hearing protection ☐ Sun protection

Carefully read through the entire installation guide before commencing any installation work.
Ensure measurements are correct before cutting components.

ModePanel Adjustable Gate Components

Take care when opening and unloading the package. ModePanel Adjustable Gates are packaged fully assembled. If the gate does not need adjusted in size, it can be installed immediately after unpacking.

Ensure all components are accounted for and check it is all undamaged.

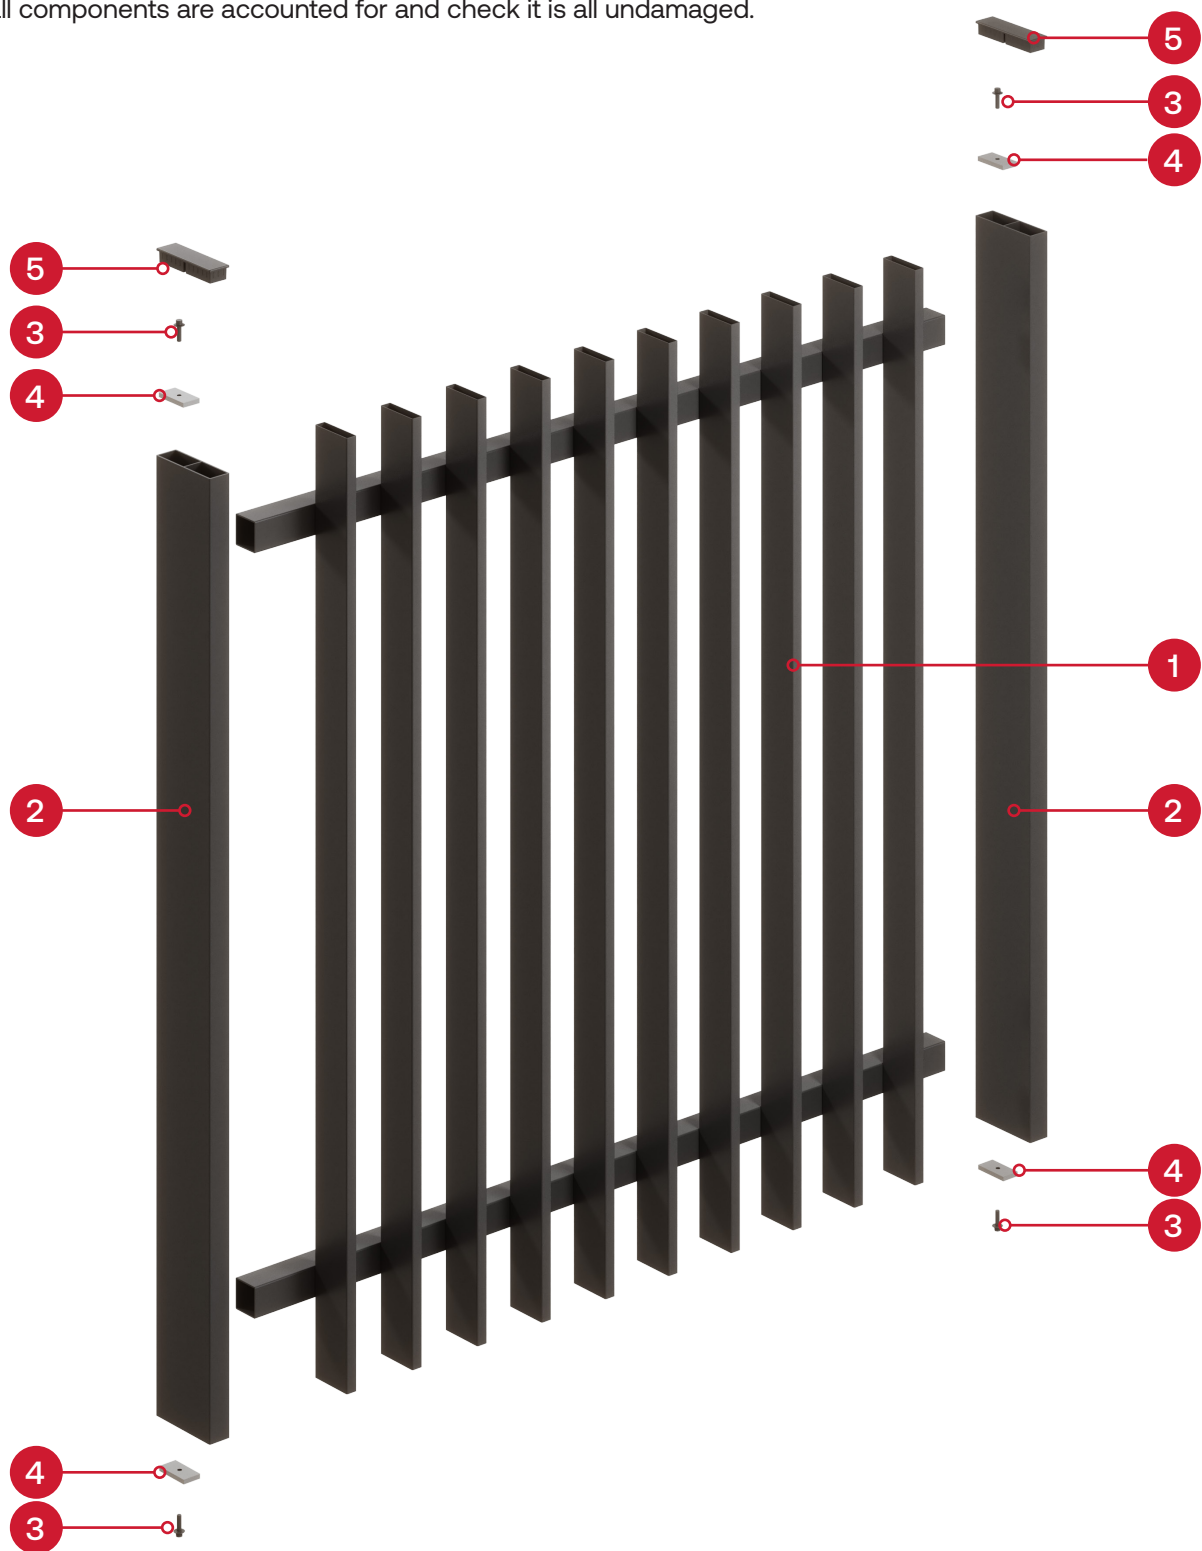

A complete ModePanel Adjustable Gate consists of:

1. ModePanel Panel



x1

2. Stiles
110x32mm



 
x2

3. Tek Screws
12gx25mm



x8

4. Retaining Clips



x4

5. Stile Caps



x2

Step 1 | Measuring the Gate

Measure the distance between the posts where the gate is going to hang from. From that measurement, allow clearance for the hardware you intend to use.


If the gate width is correct for your space go to **Step 5** on **page 06**.

When measuring the gate for resizing, keep in mind, the rail should go all the way into the stile. The retaining clip is designed to be inserted inside the stile and screwed into the rail to hold it in place.

Ensure the rail has the following allowances when measuring for resizing:

110x32mm stile: up to 30mm
(stile width 32mm minus 2mm wall thickness)

Max 1160mm plus hinge and latch clearance

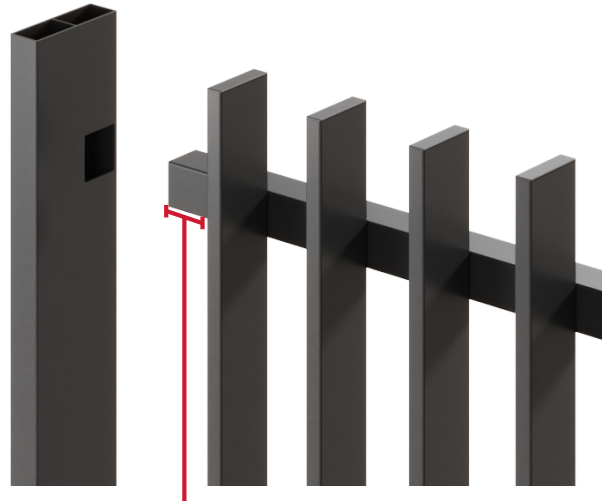

Allow enough length on rail to go into stile



Step 2 | Disassembling the Gate

If the gate width is correct for your space go to **Step 5** on **page 06**.

If resizing the gate, cutting an equal amount from both ends is recommended to keep the gate appearing even.

To remove the stile,

1. Remove the stile cap.
2. Undo the tek screws holding the retaining clips in place. There are two retaining clips at the top and bottom of each stile holding the rails in place.
3. Extract the retaining clip.
4. Slide the stile out from the rails.

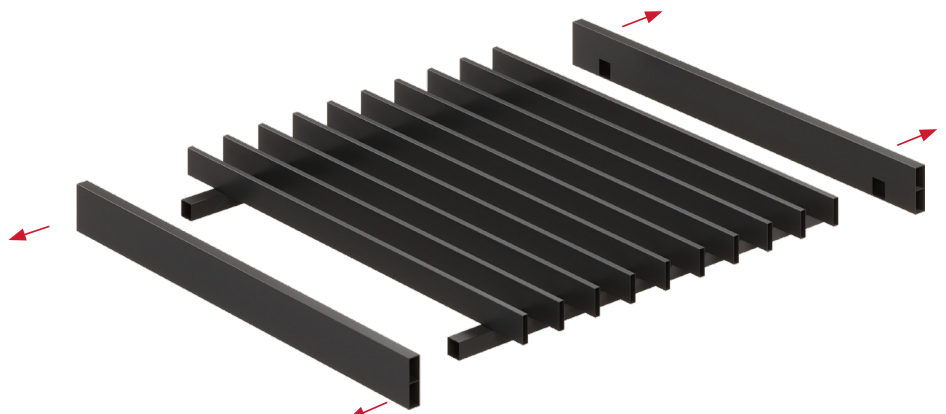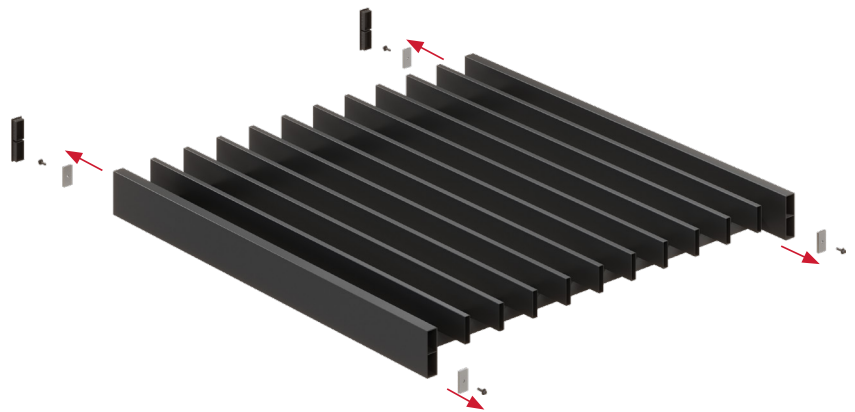



Step 3 | Cutting the Gate to Size

When cutting panels or stiles to length, use a hacksaw or a power saw with a sharp diamond tip blade, or tungsten tip on aluminium. Remove any swarf to prevent corrosion.

Grinders or abrasive cut off wheels aren't recommended as these can burn the powder coat finish.

1. Mark the required length on the gate, keeping in mind that the rail should go all the way into the stile. Cutting an equal amount from both ends will ensure the gate spacing remains consistent.
Ensure the rail has up to 30mm allowance (to be inserted into the stile on either side) when measuring for resizing (stile width 32mm minus 2mm wall thickness).
2. Cut the rail to your required length.
3. Slot the stiles back onto the rails. **Do not fix the retaining clips into place at this point.**
4. Ensure the gate is square by measuring both diagonals from corner to corner. These should be the same length.
5. Lift the gate into position to confirm the gate fits the space.

Cut from both ends to keep consistent spacings

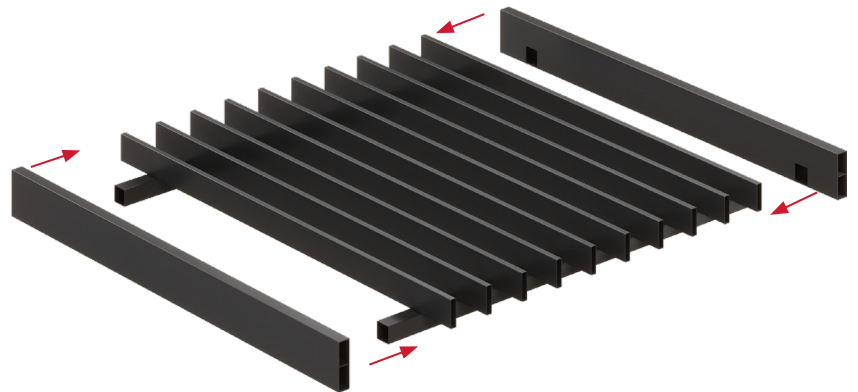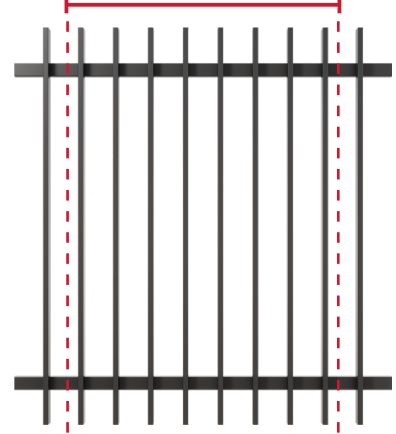

Step 4 | Completing Assembly

Once the gate has been confirmed to fit the space, it can be fully reassembled.

To reattach the stile:

1. Insert the retaining clip into the stile and fix into place with the tek screws.
2. Insert the stile caps back into the top of the stiles.
3. Inspect the final assembled gate for stability and alignment and make any necessary final adjustments.






Step 5 | Installing the Gate

Once the gate is completely assembled, it is ready to be installed.

1. Decide the best orientation for the gate. Determine whether it needs to be hinged on the left or right side, and if it needs to open inwards or outwards.
2. Install your choice of hinges onto the gate. The recommended position for the hinges is set 100mm from the top and bottom of the stile. Position and attach the hinges to the stile using the provided screws. Ensure the hinges are attached to the correct side of the stile.
3. Hang the gate. Set the gate in the gate way, making sure the top of the gate is level with the adjoining fence. It can make it easier to get a second person to assist with holding the gate. Once the gate is in the correct position and is straight and level, screw the hinges to the post. Before fully fastening the hinges in place, open the gate to test the function. If no adjustments are required, fasten the screws completely.
4. Install your choice of latch. Refer to the manufacturers instructions on how to install the latch, as this can vary depending on latch type.

Recommended hinge placement 100mm from top and bottom of stile

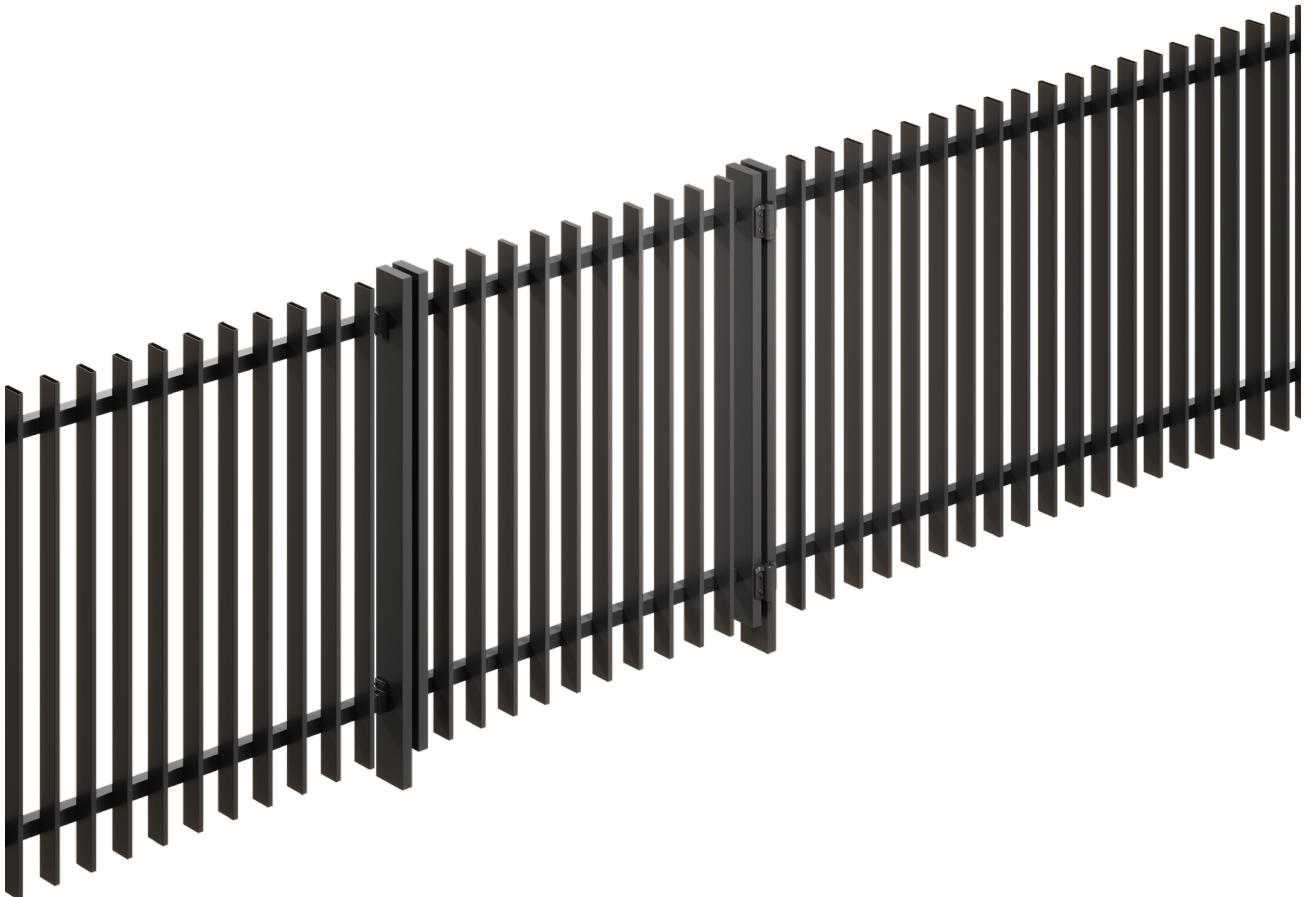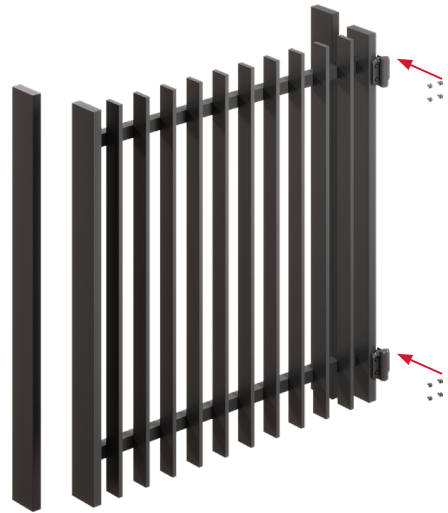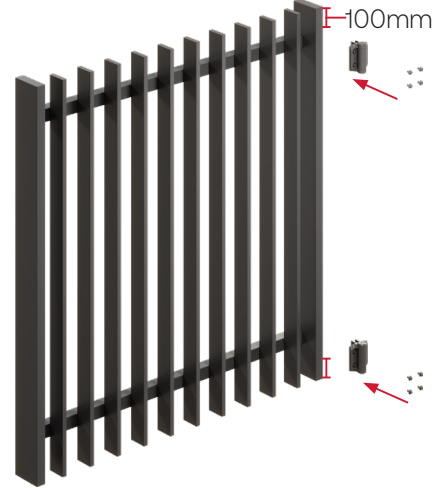

Auckland

43 Noel Burnside Road
Wiri

Christchurch

19 Mānia Road
Hornby South

Invercargill

60 Basstian Street
Prestonville

0800 003 006

enquiries@boundaryline.co.nz

boundaryline.co.nz

Please note: This document is only intended to be a general guide, as every property and situation is different. All measurements are provided as a general guide. For detailed specifications, including full technical drawings and PS1 documents (where applicable), please refer to our website.

Any installation work, including the use of power equipment is completely the responsibility of the person(s) installing.

All persons using power equipment must be trained and certified to use the equipment and must wear all applicable personal protection gear.

Boundaryline Limited cannot accept any responsibility for any faulty installation or damage or injury arising from installation work.

Our team is available 7am - 5pm, Monday to Friday on 0800 003 006 or email us at enquiries@boundaryline.co.nz.